

Triax BNC, female/female



Converts triax BNC male to triax BNC female. It can be mounted to a wall panel as a feed-through in conduit cable installations. Both ends are identical; female insert with two lugs.

Triax BNC, male/male



Converts female BNC connector on a 30-404 Memorial chamber or early Capintec PR-06C to a triax male for use with a triax BNC extension cable. Both ends are identical, having male

TNC to Triax BNC



Converts a triax BNC electrometer input to TNC. Used to connect an NE TNC terminated ion chamber to a CNMC, Victoreen, or Keithley electrometer. Male BNC, female TNC with a threaded ring.

Triax BNC to TNC



Converts a TNC electrometer input to triax BNC. Used to connect a triax BNC terminated ion chamber to a Capintec, NE, or Wellhöfer electrometer. Female BNC, male TNC with threaded

Triax BNC, female/female



Converts a TNC electrometer input to triax BNC. Used to connect a triax BNC terminated ion chamber to a Capintec, NE, or Wellhöfer electrometer. Female BNC, male TNC with threaded ring.

Triax BNC to Coax BNC



Converts coax BNC male to coax BNC female, for panel mount feed-through applications. Both ends are identical.

Coax BNC, female/female



Converts a Capintec or old-style Wellhöfer TNC terminated ion chamber to a triax BNC male for use with a triax BNC extension cable. Male BNC, female TNC with threaded body. (Not available in a single piece adaptor.)